

Universal Timber Jamb Kit – Installation Instructions

Compatible with the BarrierSlide PD1 & PD2, Coburn Hideaway, and similar pocket door systems.


Note: The jambs are supplied unfinished. It is recommended that they are primed before installation.

Brush Strip Installation



Two brush strip sizes are supplied (5 mm and 12 mm). Select the most suitable size during installation. Before fixing the carrier in place, slide the selected brush strip into the self-adhesive carrier from one end.


Installing the Closing Edge Jamb

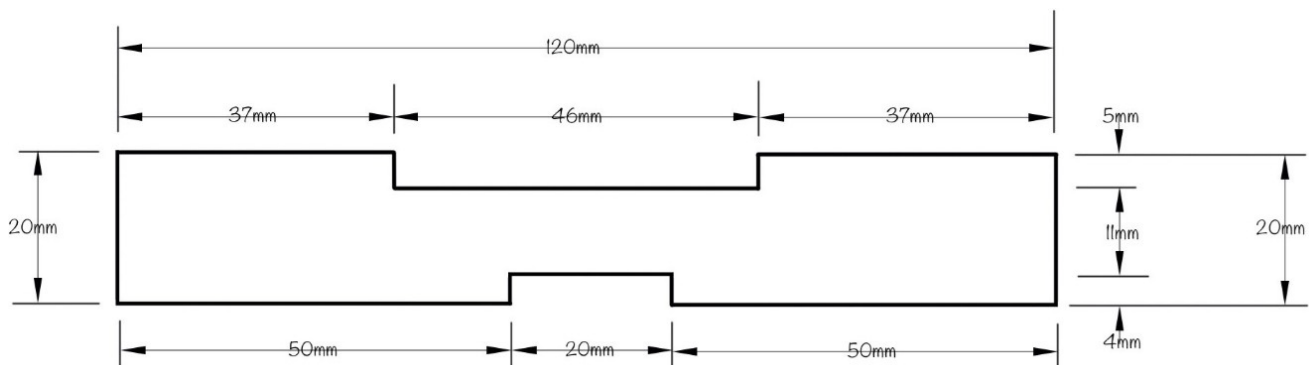

1. Measure the distance from the finished floor to the underside of the timber track packer.
2. Cut the Closing Edge Jamb to the required height.
3. Position the jamb against the studwork, ensuring an equal overlap on both sides.
4. Secure the jamb using your preferred fixing method (screws, nails, or adhesive – not supplied).

Recommendation: Screws are recommended to allow the jamb to be removed in the future if required.


Installing the Pocket Edge Jamb

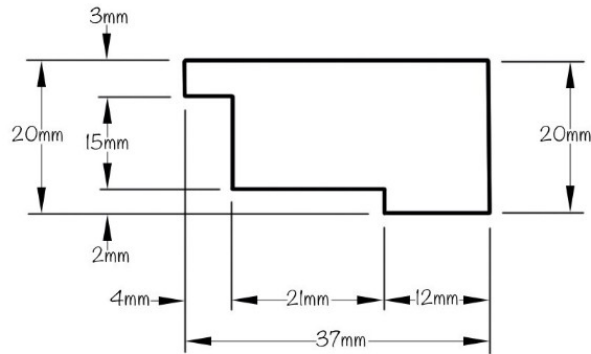

1. Measure the distance from the finished floor to the underside of the timber track packer on both sides of the pocket.
2. Cut both Pocket Edge Jambs to the required height.
3. Fit the selected brush strip and carrier into the 15 × 4 mm groove in each Pocket Edge Jamb.
4. Align the 21 mm recessed section of the Pocket Edge Jamb with the pocket kit uprights.
5. Secure the jamb using your preferred fixing method (screws, nails, or adhesive – not supplied).

Recommendation: Screws are recommended for easier removal should future maintenance be required.

Installing the Header Jamb

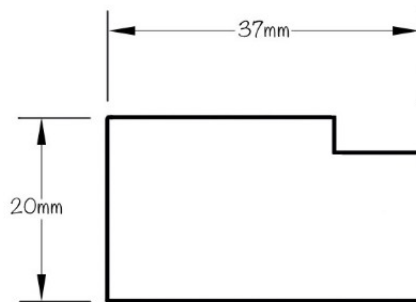

1. Once the Closing Edge Jamb and Pocket Edge Jambs have been installed, measure the distance between them.
2. Cut the Header Jamb to the required length. Each supplied length provides two header pieces.
3. Position each Header Jamb so it sits flush with both the Closing Edge and Pocket Edge Jambs.
4. Secure using your preferred fixing method (screws, nails, or adhesive – not supplied).

Fill any screw holes as required and finish with paint or stain to suit your installation.

Double Pocket Door Kits

For double pocket door installations:

- Omit the Closing Edge Jamb installation.
- Install the Pocket Edge Jambs on both pockets following the instructions above.
- Measure the distance between the two sets of Pocket Edge Jambs.
- Cut the two Header Jamb pieces to suit and install them following the Header Jamb instructions.